

First, please log in address IP: 192.168.169.1 to your browser. Then you will see the following steps.


For DHCP(Auto config): Just Apply the automatic IP to connect

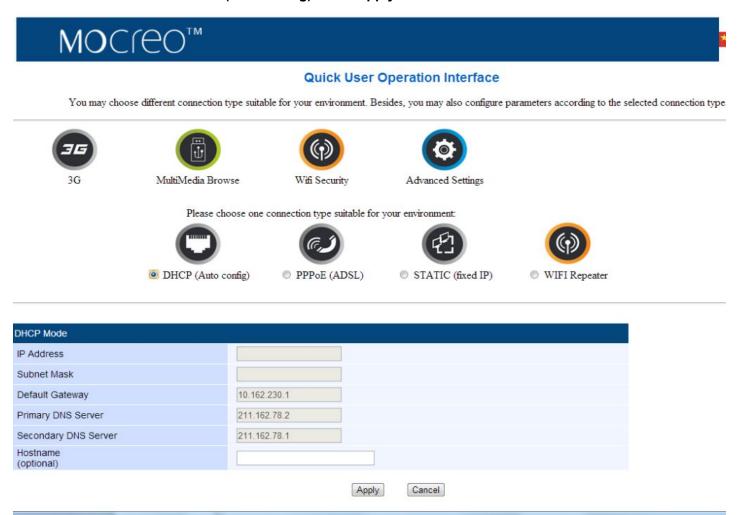

For PPPOE: Please enter your user-name and passwords from your networking provider to connect

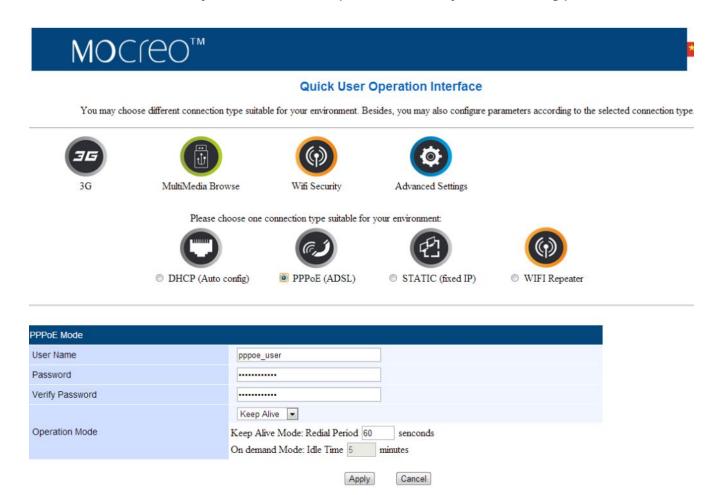

For STATIC(Fixed IP): Please enter your IP address defaulted to connect

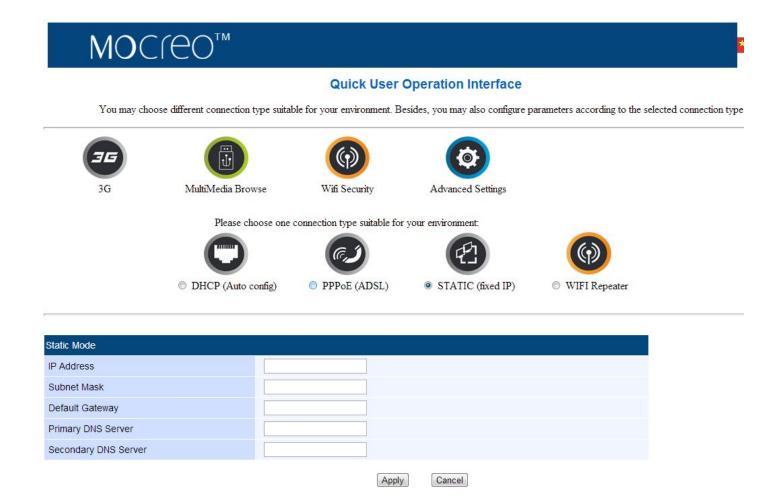

For Wi-Fi repeater: Please connect your WIFI . If you cannot find it , then 'scan all APs' to get connected

